

ELD Setup Guide

ALPHA e-LOGBOOK

← Inspection Logs

<

Wed, Jan 24th

>

Vehicle

Vehicle

VIN

Odometer

Distance

Trailers

Shipping Docs

TRUCK #231

JNKAJ1HRXAM11111

54321

123.45mi

DOC #321

Carrier

Carrier

Main Office

Carrier

12345 Excelsior Blvd

Web Portal Setup Instructions

Step 1

Access the web portal and login using provided credentials.

Step 2

Manage your company information, add vehicles, portal users, and drivers to the system.

Note

For FMCSA compliance, use different login credentials for portal users and drivers.

ELD Hardware Installation

Step 1

Connect the ELD device to your vehicle's diagnostic port using the provided cable. For certain vehicle models, special cable harnesses may be required for optimal functionality.

Step 2

Mount the device using the dual fastener for dash placement.

ELD Hardware LED Indicators

Slow Flashing Green LED



The device is successfully powered up.

Fast Flashing Green LED



The device has detected vehicle activity.

Solid Green LED



The device is in a fully operational state.

Note

LED indicators might not always remain lit for power management reasons.

Device Synchronization and ELD App Setup

Step 1

Turn on the vehicle engine after completing the previous steps.

Step 2

Run the ELD app.

Step 3

Log in with your credentials (portal users and drivers must have different login details).

Step 4

Select your vehicle from the list. ELD hardware will connect automatically.

Log Management

Access Logs

Open the ELD app, log in with your credentials, and select "Logs" from the main menu.

View Logs

Review your RODS for different dates, displaying detailed information about duty status changes.

Edit Logs

Modify duty status entries (except automatically recorded driving time) by tapping a date, using the pencil icon, and saving changes.

Certify Logs

End your shift by digitally certifying your logs for accuracy and compliance.