

 
AGE Manual

How it works:

1: AGE(ASM GPS ELD) is an independent system without connect to engine ECM. AGE includes on-vehicle modular and monitoring device, on-vehicle modular is mini-computer including GPS and GSM modular with battery supported,.

2: GPS collect geographic Latitude, Longitude, Speed, Date/time etc. information, microprocessor collect Engine ON/OFF status by input wire from engine, and all those data will be sent to ASM data server to analysis and store by GSM every ten seconds interval when engine status is ON, or every 300 seconds when engine is OFF.

3:LED terminal will display ELD data and report ELD status including malfunction state.

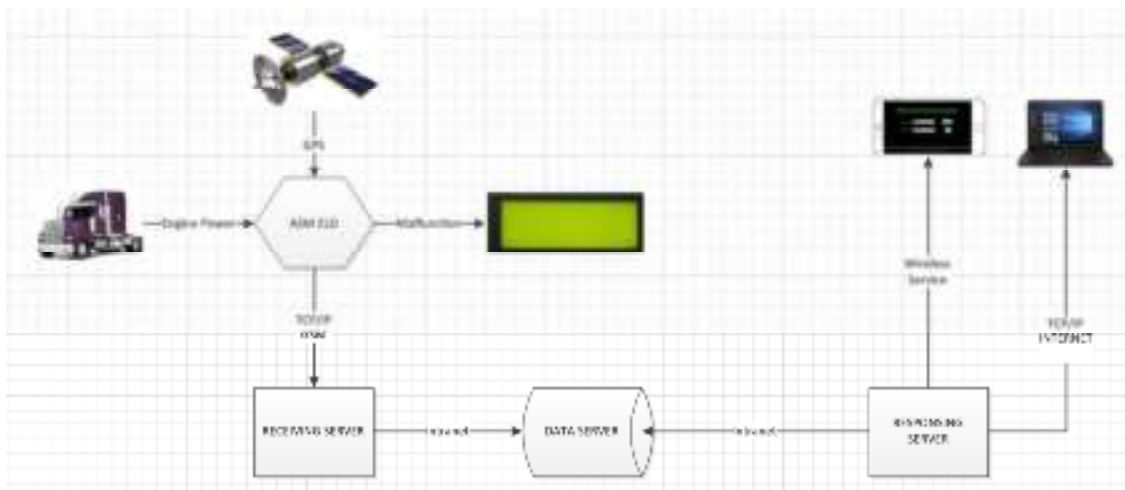

4: A database in ASM data center record relationship between vehicle ID, GSM IMEI(International Mobile Equipment Identity), username, driver and company info. Before received data received from ELD come with GSM IMEI be saved to database server, it will be compounded with vehicle ID converted by IMEI from previous database.

5: An APP for Apple iPhone is used to display log book during roadside inspection, and a website is ready for staff monitor driver and vehicle status. When user (driver or staff) is ready to require a record, an identical user name and password are needed to login , after authorized by ASM control server, ELD user can request driving duty log record day by day with driver's info, vehicle ID and motor carrier info, and all data and log chart are displayed on user's mobile device or desktop computer with internet service.

 
6: Daily job and trailer info are pre-set by dispatcher, driver must check job detail and confirm trailer plate number every day before driving.

iPhone APP User

first download ASMBOOK APP from Apple store and run it




1.Login with username and password provided by ASM(testing username: demo , password: demo)

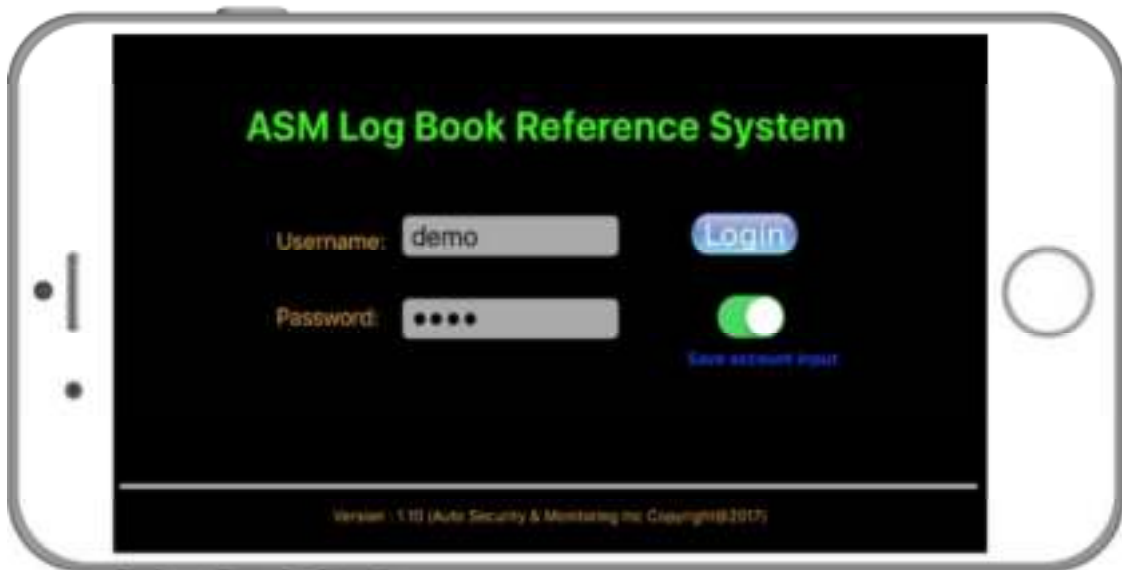

2. Driver and vehicle info are displayed on the page. Select date and tap <Log Book Chart>




 3. Job, trailer and co-driver info are displayed, driving mileage will be calculated automatically according to vehicle GPS data. User can change log chart by double tapping screen. Un-defined time is set to OFF DUTY, user can change it to SLEEPING or ON DUTY, and to DRIVING when in MALFUNCTION EVENT. RESTORE Button will cleaning SLEEPING, ON DUTY or DRIVING in MALFUNCTION back to OFF DUTY.

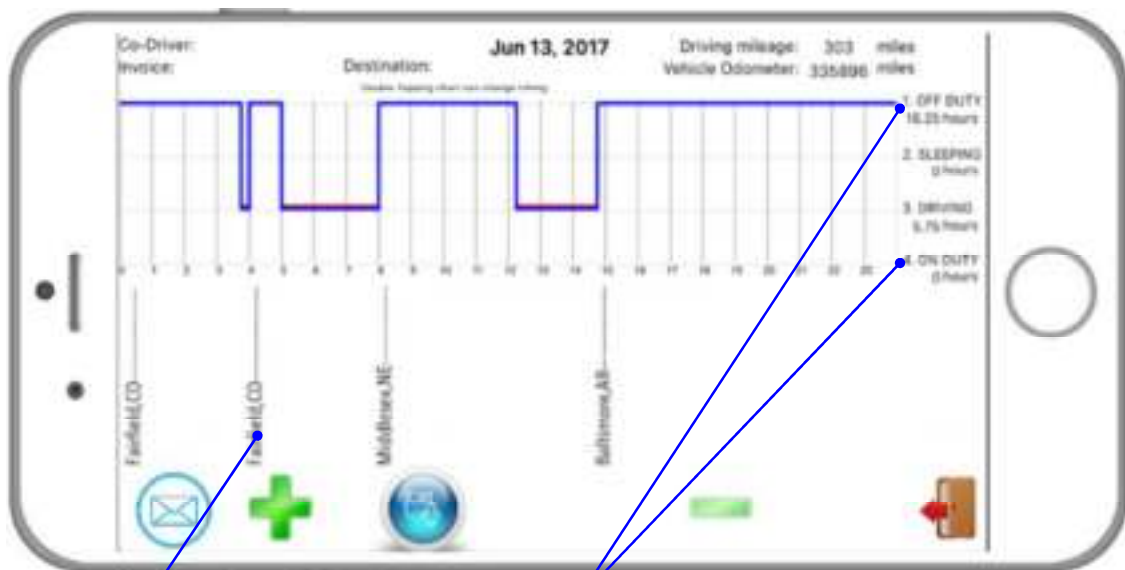


Stop locations are show according to GPS data from ASM data center.

 Total Duty time is calculated automatically after chart is changed.

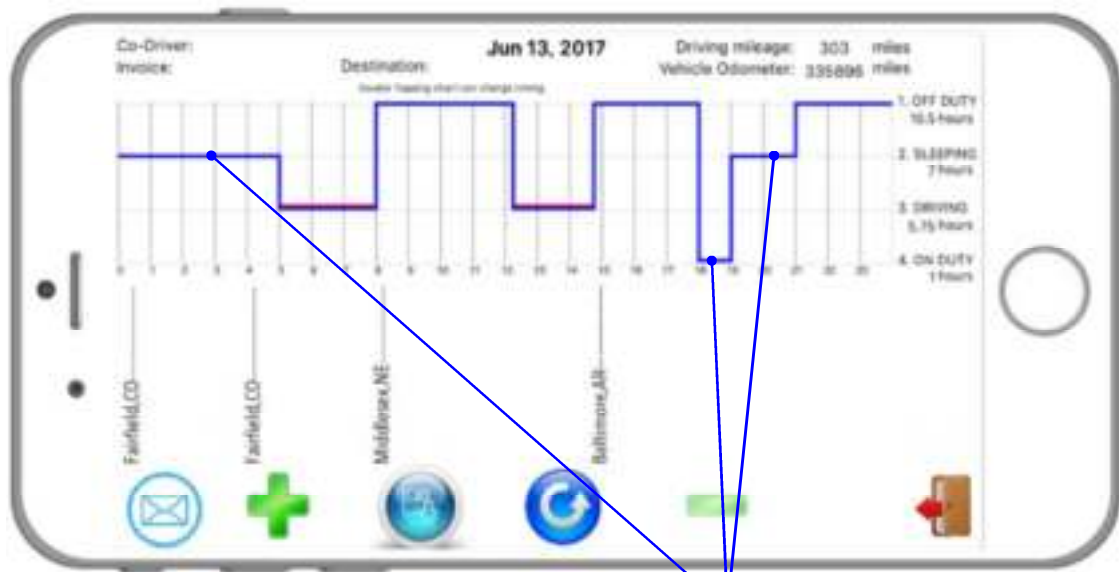

Double tap chart to modify timing line. After finishing modification, tap Save icon to save to ASM server, tap Restore will back to original chart.

 4. Double tapping location text will allow user add/modify stop reason.

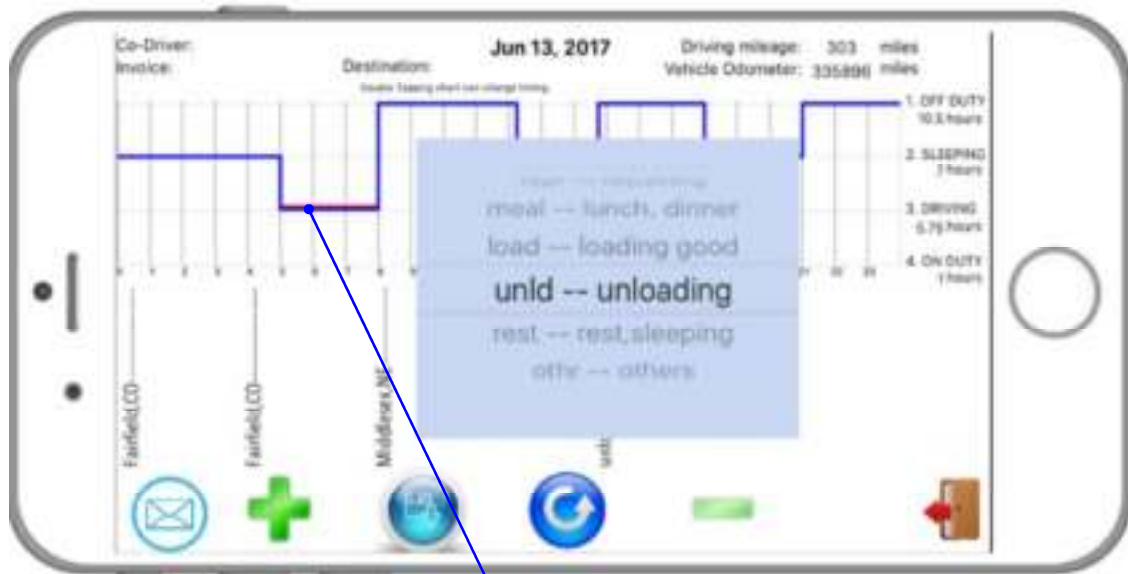

Red color line is for driving timing that can't be adjusted, it is created by accumulating time if Engine ON status, driver can modify OFF/ON DUTY or SLEEPING time only.



There are seven pre-defined stop reasons:

 
- 1:Inspection
- 2:Repairing
- 3:Lunch,dinner
- 4:Loading good
- 5:Unloading
- 6:Rest,sleeping
- 7:Others

5. Allow modify current odometer value according to vehicle odometer, tap SAVE button to record the changing.

Double tapping to modify odometer.




6. Email function will transfer current day data to Address provided by FMCSA.(6 months data available from today, and 3 years data if special request).

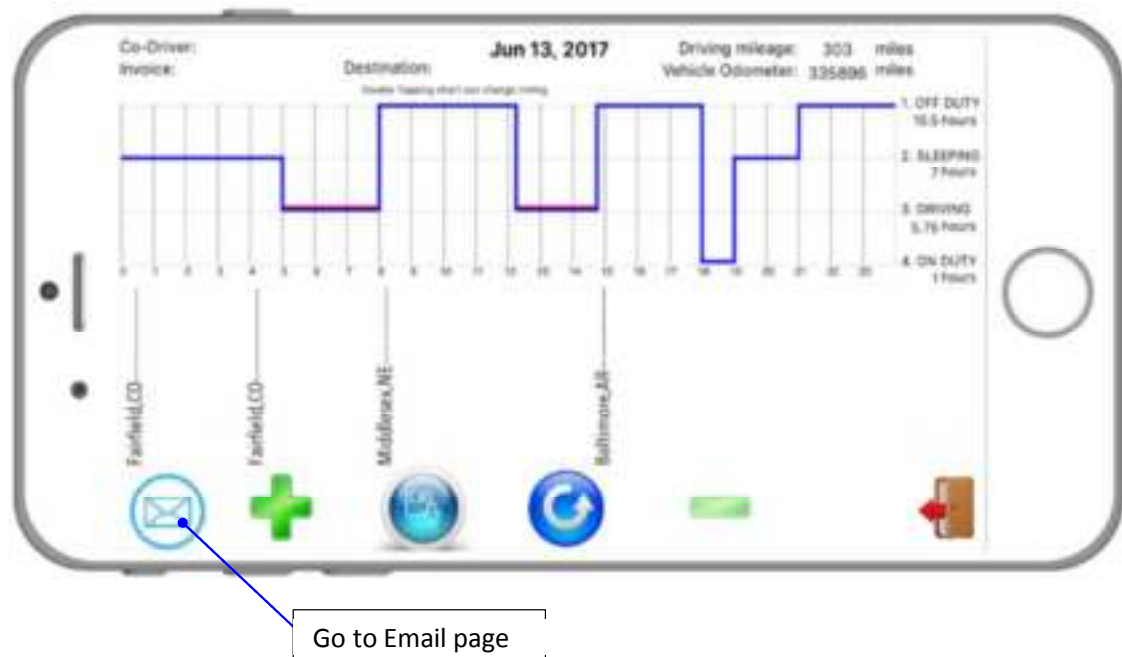

PCDriver

Drivers management is under operator interface.

 After an operator login to www.asmgps.com , move the cursor to the “ELD” link from the navigation menu.

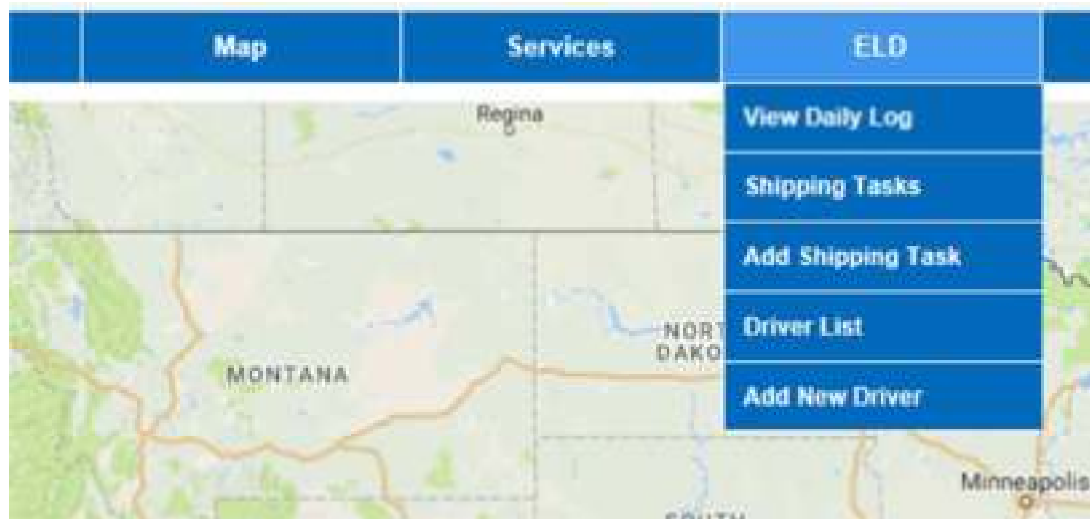


1. Add a new driver
Click the “Add new driver” Link.

Select the vehicle want to enable the ELD function, input the information (all field are required) about the driver, and click the “Submit” Button to enable the ELD function.
The “Return” button will navigate the page to driver list page

A screenshot of the 'Enable ELD Function' form in the PCDriver application. The form is titled 'Enable ELD Function' and contains several input fields. The 'Vehicle Name' field is a dropdown menu with '708' selected; a red box highlights this field with a red arrow pointing to it. The 'Vehicle Plate' field contains the text 'WP62756'. Below these are four text input fields: 'Login Name', 'Password', 'Driver Legal Name', and 'Driver License', each with a red arrow pointing to it. At the bottom left is a 'Return' button, and at the bottom right is a 'Submit' button, which is circled in red.

 2. View driver list
Click the “Driver list” link to view all the driver who enable the ELD function.

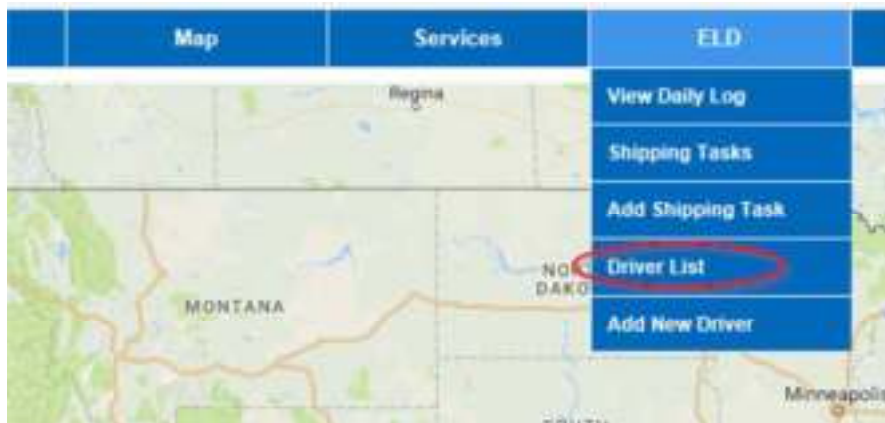

You will see the list of drives. Click “Edit” button to update or edit driver information.

ELD Drivers List				
Vehicle	Username	Legal name		
802	ats802	Tony Wong		Edit
801	ats801	Lisa Cong		Edit

3. Edit driver info

Click the “Submit” button to update, or click the “Return” button to back to driver list page.

Edit Driver Info For ELD	
Vehicle Name	802
Vehicle Plate	WN48424
Username	ats802
Driver Legal Name	Tony Wong
Driver License	
<div> Return Submit </div>	

Shipping Task

Add a new shipping task.

Click the “Add shipping task” link from menu.



In the new page, fill all the information about shipping task, and then click the “submit” button.

Or click the “Return” button to back to shipping tasks page.

Add A New Shipping Task

Vehicle

select ▼

Start Date

End Date

From

To

Invoice

Shipper

Co-driver

Return

Submit

[View shipping tasks](#)

Click the “Shipping Task” link to enter the shipping tasks page.

In this page, select the vehicle first, the tasks related to this vehicle will show in list.

Shipping Tasks List

Vehicle: 801

801
 801DU
 801J
 813
 815
 816
 817
 818
 819
 820
 821
 822
 823
 824
 825
 826
 827
 828
 829
 830
 831
 832
 833
 834
 835
 836
 837
 838
 839
 840
 841
 842
 843
 844
 845
 846
 847
 848
 849
 850
 851
 852
 853
 854
 855
 856
 857
 858
 859
 860
 861
 862
 863
 864
 865
 866
 867
 868
 869
 870
 871
 872
 873
 874
 875
 876
 877
 878
 879
 880
 881
 882
 883
 884
 885
 886
 887
 888
 889
 890
 891
 892
 893
 894
 895
 896
 897
 898
 899
 900
 901
 902
 903
 904
 905
 906
 907
 908
 909
 910
 911
 912
 913
 914
 915
 916
 917
 918
 919
 920
 921
 922
 923
 924
 925
 926
 927
 928
 929
 930
 931
 932
 933
 934
 935
 936
 937
 938
 939
 940
 941
 942
 943
 944
 945
 946
 947
 948
 949
 950
 951
 952
 953
 954
 955
 956
 957
 958
 959
 960
 961
 962
 963
 964
 965
 966
 967
 968
 969
 970
 971
 972
 973
 974
 975
 976
 977
 978
 979
 980
 981
 982
 983
 984
 985
 986
 987
 988
 989
 990
 991
 992
 993
 994
 995
 996
 997
 998
 999
 1000

Click the “Edit” button the edit the task if operator need to update the task information

Shipping Tasks List

Vehicle: 801 Vehicle name Edit shipping task

Start	End	From	To	Invoice	Shipper	Edit
5/12/2017	5/19/2017	Los Angeles, CA	Dallas, TX	17051234	AMERICAN STAND INC.	Edit

Edit or update a shipping task

In this edit page, input or correct the information, and then click the “Submit” button to update task. Or click “Return” button to navigate the shipping task page.

Edit Shipping Task

Vehicle: 801

Start Date: 5/12/2017

End Date: 5/19/2017

From: Los Angeles, CA

To: Dallas, TX

Invoice: 17051234

Shipper: AMERICAN STAND INC

Co-Driver:

Return
Submit

Log

Driver login

Go to www.asmgps.com/elog/. Enter your username and password, then click the “Login” button to login.

The image shows a login form titled "ELD Driver Login" on a blue background. It contains two input fields: "Username" and "Password", each with a white text box. Below these fields is a "Login" button with a grey gradient and black text.

View log

In the LOG view page. The text box of date can be change. And the arrows can move the date to next day or previous day. When the date is changed, the log of that date will show up.

The first column is about the carrier info, including the carrier name, address, and the vehicle plate.

The second column is the information about the driver, including the driver name, driver license number and co-driver, if in the team driving.


The third column is about the shipping info, including the shipper name, bill or invoice number, start location and destination.

The last column is about the driving record, the driver need to input the start odometer before save the entire day log, the total driving miles is automatic generate by GPS tracking device. Normally, it doesn't need to change.

The image shows a form titled "E Log Book" with a grey header. It is divided into four columns of information. The first column contains carrier information: "Carrier: American Trucking Co", "Office Address: 525 E. Val Ave Westfield, CA 90640", and "Plate: WFE158T". The second column contains driver information: "Driver Name: Linda Lu", "Driver License: F0801234", and "Co-Driver". The third column contains shipping information: "Shipper: AMERICAN STAND INC.", "BR: 20174321", "From: Los Angeles, CA", and "To: Miami, FL". The fourth column contains driving record information: "Date: 5/15/2017", "Start Odometer", and "Total driving miles: 1011". Red arrows point from labels "Carrier info", "Driver info", "Shipping info", and "Driving record info" to their respective columns. There are also navigation buttons at the top: a left arrow, "5/15/2017", and a right arrow.

Modify log

 Below the information panel is the chart, total time is on the right side, the city of stop is in the bottom. The red line is used to show the status of driving.

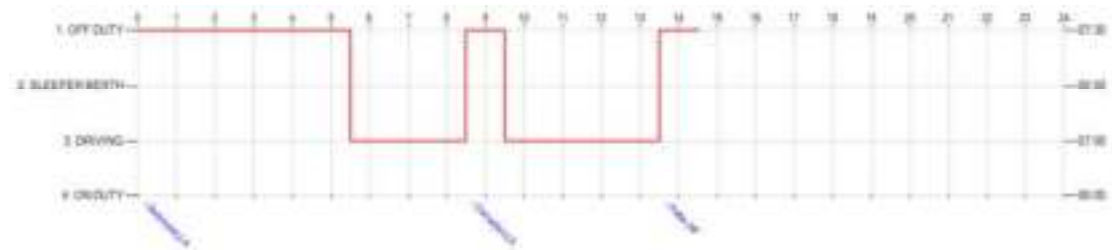

To modify the chart, just click the point of the red line. It will change status after one click. When you finish the modify, click the certify check box first and then click the “Save” button. Or click “Restore” button to restore original chart.



The list of status change list. Click the “Edit” button to edit the reason of stop. Choosing the reason from drop down list, and click the “update” button to save it.

Logs

Time (PT)	Status	Description	Location	Stop Reason	
00:00	OFF DUTY	00:00	Truckstop L.A.		0.00
05:00	DRIVING	05:00			
06:00	OFF DUTY	07:00	Compton L.A.		0.00
08:00	DRIVING	09:00			
11:00	OFF DUTY	00:00	Police MP		0.00

Logs

Time (PT)	Status	Description	Location	Stop Reason	
00:00	OFF DUTY	00:00	Truckstop L.A.		0.00
05:00	DRIVING	05:00			
06:00	OFF DUTY	07:00	Compton L.A.		0.00
08:00	DRIVING	09:00			
11:00	OFF DUTY	00:00	Police MP		0.00

Log Reason: reporting work, driver loading and unloading, not sleeping, others.

Logoff

To log off the chart view, just click the “Log off” link from the menu bar.



ELD MALFUNCTIONS

In case of an ELD malfunction, a driver must do the following:

- (1) Note the malfunction of the ELD and provide written notice of the malfunction to the motor carrier within 24 hours;*
- (2) If the ELD records are not retrievable from the ASM data center, reconstruct the record of duty status for the current 24-hour period and the previous 7 consecutive days.*
- (3) Manually prepare a record of duty status until the ELD is serviced and no longer malfunctioning.*

ELD MALFUNCTION CLEARING

ELD Malfunctions will clear automatically when the parameters that caused the malfunction no longer exist.

ELD Malfunction and Diagnostic

All states will display on LED.

MALFUNCTION AND DATA DIAGNOSTIC EVENTS DEFINITIONS

Power Data Diagnostic:

The ELD was not able to power up within one minute of engine power up. Check the device connections are not loose. If this issue persists, contact your administrator.

Power Compliance Malfunction:

The ELD was not functional for more than 30 minutes over the last 24 hours. Check the device connections are not loose. If this issue persists, contact your administrator.

Engine Status Diagnostic:

The ELD is not connected to the engine. Check the cable is connected to the vehicle engine. If this issue persists, contact your administrator.

Engine Status Compliance Malfunction:

The ELD can't detect engine status for more than 30 minutes over the last 24 hours, contact your administrator.

Positioning Data Diagnostic :

The ELD is not receiving GPS location. Check that the GPS is ON in this device, the vehicle antenna is not damaged and connections are tight. If this issue persists, contact your administrator.

Positioning Compliance Malfunction:

The ELD did not receive GPS location for more than 60 minutes over the last 24 hours. Check that the GPS antenna is not damaged and connections are tight. If this issue persists, contact your administrator.

Timing Compliance Malfunction:

The ELD time is off by more than 10 minutes. If this issue persists, contact your administrator.

Missing Required Data Elements Data Diagnostic:

The ELD is missing required data for creating ELD records. Check Positioning Compliance. If this issue persists, contact your administrator.

Data Recording Compliance Malfunction:

The ELD don't send data to server for 15 minutes. Check that the GSM antenna is not damaged and connections are tight. If this issue persists, contact your administrator.

Unidentified Driving Records Data Diagnostic:

The ELD has recorded more than 30 minutes' worth of unidentified driving records in the last 24 hours. Ensure that drivers are logged into the ELD while the vehicle is in motion and accept any unidentified records that may belong to you. If this issue persists, contact your administrator.

Data Transfer Compliance Malfunction:

The ELD test of data transfer to ASM data center server has failed. Ensure that the ELD data connection is working. If this issue persists, contact your administrator.

Data Transfer Data Diagnostic:

The ELD test of data transfer to ASM data center server has failed. Ensure that the ELD data connection is working. If this issue persists, contact your administrator .

Summary of Malfunction event:

Power Compliance Malfunction

Engine Status Compliance Malfunction

Positioning Compliance Malfunction

Timing Compliance Malfunction

Data Recording Compliance Malfunction

Data Transfer Compliance Malfunction