



DREAM ELD

Instruction Manual for Drivers



Table of Contents

Installation & Recording Driving Time

1. Download the Dream ELD App
2. Login to the Dream ELD App
3. Connect your mobile device to the Dream ELD device
4. Record Hours of Service with the Dream ELD device
5. Let an officer inspect your logs

Troubleshooting

6. Trouble connecting with the ELD device
7. ELD device malfunction

Download Dream ELD app

STEP 1:

For Android phones and tablets, download the Dream ELD App from the Google Play Store.

For iPhones and iPads, download the Dream ELD App from the App Store.



Login to the Dream ELD app

STEP 2:

Open the Dream ELD App, enter your username / password. If you don't have an account Dream ELD driver account contact your fleet manager.



Connect your mobile device to the Dream ELD

STEP 1:

When you login to your account you will be asked to choose your vehicle from your fleet



STEP 2:

After you choose your vehicle you will be asked to connect your app to the Dream ELD device



STEP 3:

Check if your connection was successful or failed by the icon at the top right corner.



Record Hours of Service with the Dream ELD

STEP 1:

When your vehicle is moving at 5 MPH or greater, Dream ELD considers the vehicle to be IN MOTION and your duty status will automatically be set to Driving.



STEP 2:

At 0 MPH, the vehicle is considered STATIONARY.



STEP 3:

When STATIONARY, you can change your duty status by tapping DRIVING and selecting one of the alternate duty statuses listed.



STEP 4:

If the vehicle remains STATIONARY for five minutes, a pop-up window will appear that asks if you still driving or not. If nothing is selected, your duty status will automatically be changed to On Duty.



DOT Inspection mode

STEP 1:

Tap on the DOT icon from the menu.



STEP 2:

To let an officer inspect your logs directly from your device, tap Begin Inspection.



STEP 3:

 
To send your ELD output file to the DOT via email or web service, tap Send Output File.



Trouble connecting with the ELD

STEP 1:

Press on disconnected icon at the top right corner and try to reconnect



STEP 2:

Try to turn off your bluetooth, wait 30 seconds and turn it back on. After you turn it on go back to the Dream ELD app and try to reconnect.

STEP 3:

Contact the customer support team and explain the situation and they will test your device and tell you if it is functioning correctly or malfunctioning.

Email: support@dreameld.com

Phone: 800-782-9079

Web: www.dreameld.com

ELD Malfunction

§ 395.22 Motor carrier responsibilities—In general. (h) In-vehicle information. A motor carrier must ensure that its drivers possess onboard a commercial motor vehicle an ELD information packet containing the following items: 3. An instruction sheet for the driver describing ELD malfunction reporting requirements and record keeping procedures during ELD malfunctions. The following instructions are in accordance with the guidelines set forth in § 395.34:

How does the driver know if the ELD is malfunctioning?

Neither of the LED lights on the device are turned on (neither green nor red) when the device is plugged into the truck's diagnostic port and power is flowing to it.

