

SUN ELD

User manual for SUN ELD

info@sun-eld.net

(707) 606-0101

2879 BURWOOD AVE

ORLANDO FL 32837



How to install ELD device:

- 01** Ensure your vehicle's engine is switched off. If the engine is running, turn it off and set the key to the "Off" position before connecting the ELD device.
- 02** Locate the diagnostic port within your vehicle's cabin. It is commonly found in one of these locations:
 - Below the left side of the dashboard
 - Under the steering wheel
 - Near the driver's seat
 - Beneath the driver's seat
- 03** Attach the ELD plug to the vehicle's diagnostic port. Secure it by tightening the locking surface until it is firmly in place. Ensure the ELD is properly connected.
- 04** After being plugged in, the device will begin syncing with the engine control module (ECM) and the SUN ELD application on the tablet.
- 05** Then get the tablet provided by fleet and turn it on. Tablet should automatically start application.




Application guide

01

Log in to the application using your username and password.

If you don't have a SUN ELD account, please reach out to your carrier.

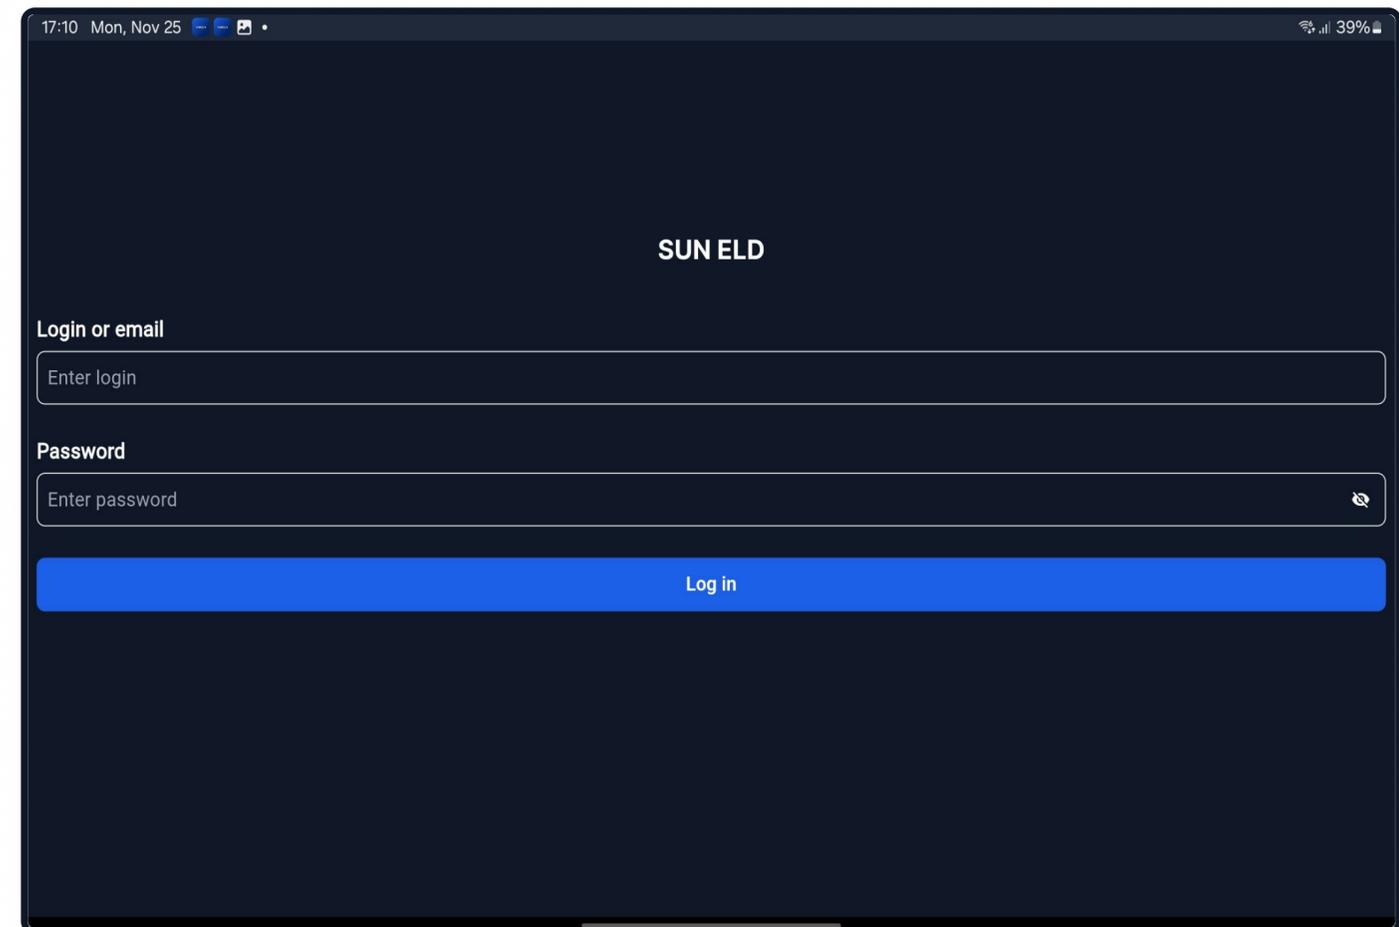

Application guide

02 Your tablet with SUN ELD application should be connected to ELD.

When you log in to your SUN ELD account, choose which device to connect.


And the ELD device lights green, when it is ready to use.



Application guide

03 If the ELD is connected to vehicle, you can see green icon on the top of the dashboard


04 If it is not connected, the icon stays red

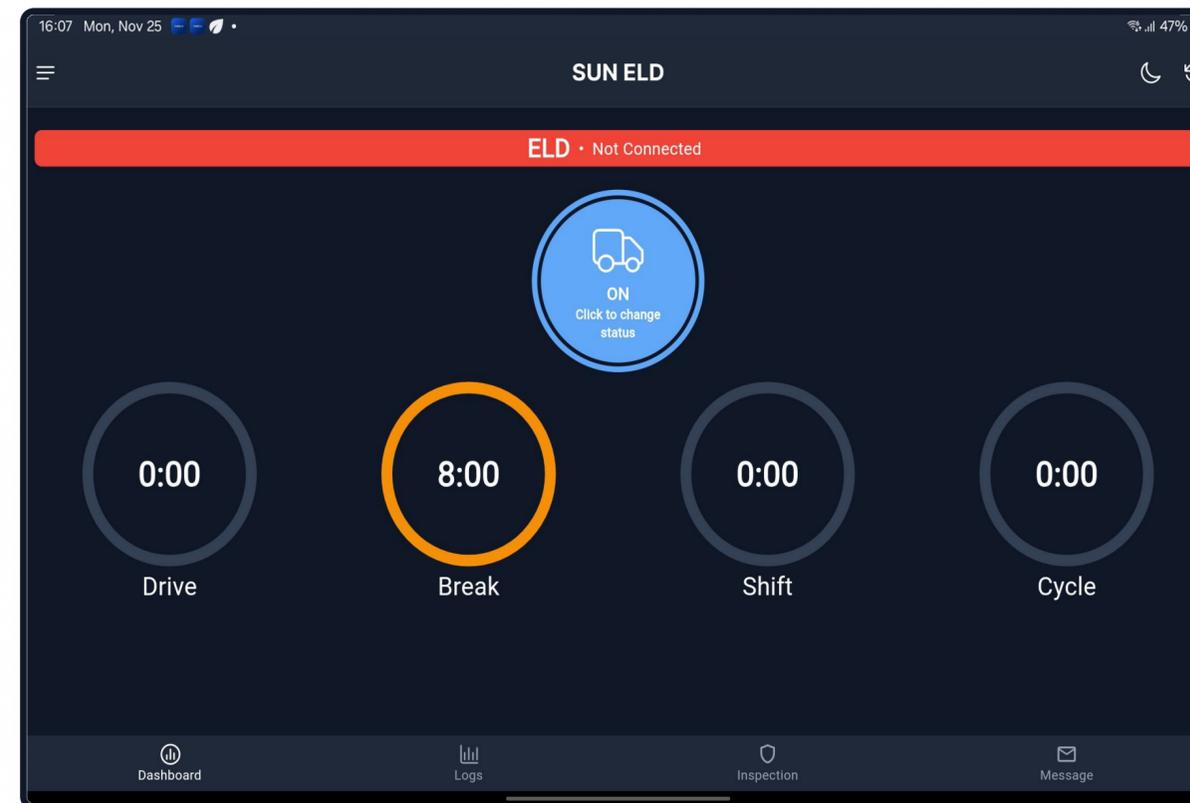

Using SUN ELD on the road:

01 Once your mobile device is connected to the ELD, your driving time will be automatically recorded.

When your vehicle starts moving and reaches the speed of at least 5 mph, your duty status is automatically set to “Driving”.

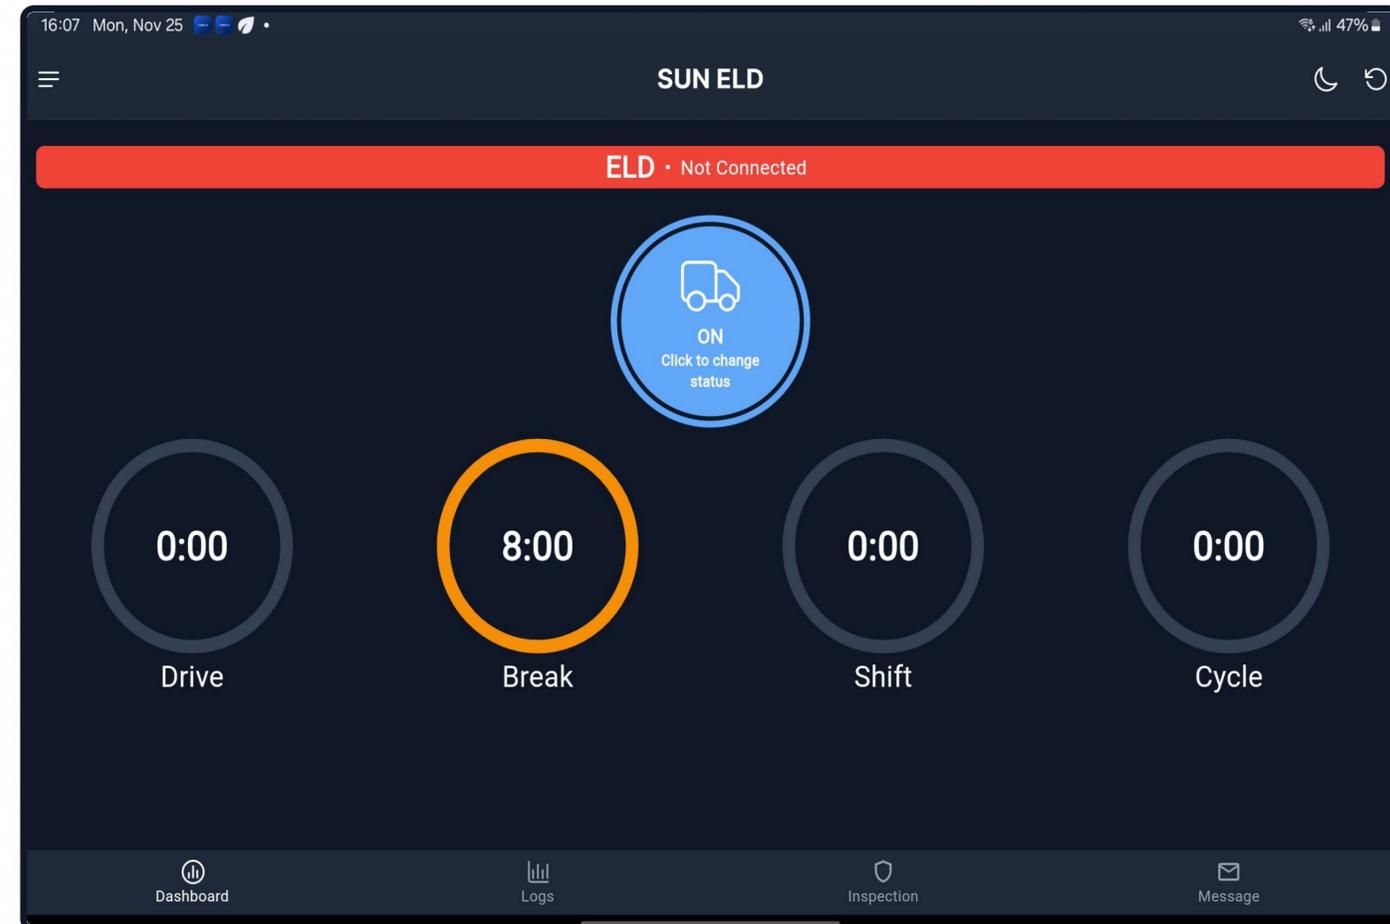


Using SUN ELD on the road

02 Set your duty status in the main window based on your current situation.

From the statuses in the main window, select "Off Duty", "Sleep", "On Duty" depending on your situation

03 Fill out location field and put remarks, such as "Pre-trip inspection" or "Coffee break".

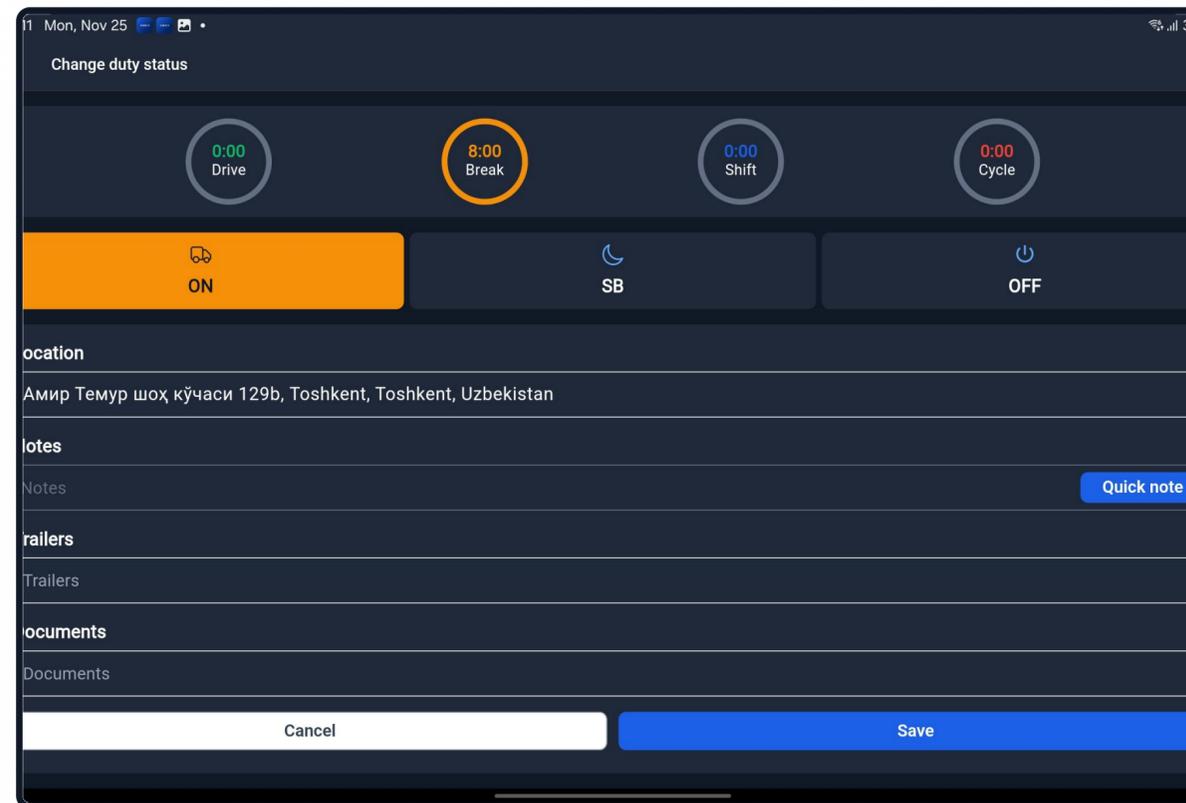


The screenshot displays the 'Change duty status' screen of the SUN ELD application. At the top, there are four circular buttons representing different duty statuses: 'Drive' (0:00), 'Break' (8:00), 'Shift' (0:00), and 'Cycle' (0:00). Below these are three larger buttons: 'ON' (highlighted in orange), 'SB' (Sleep), and 'OFF'. The 'Location' field is filled with 'Амир Темур шоҳ кўчаси 129b, Toshkent, Toshkent, Uzbekistan'. There are also fields for 'Notes', 'Trailers', and 'Documents', each with a 'Quick note' button. At the bottom, there are 'Cancel' and 'Save' buttons.

Review ELD logs

01 Tap "Inspection" icon on the bottom navigation bar

02 Tap "Begin inspection" and show your electronic logbook's eight-day summary to the officer.

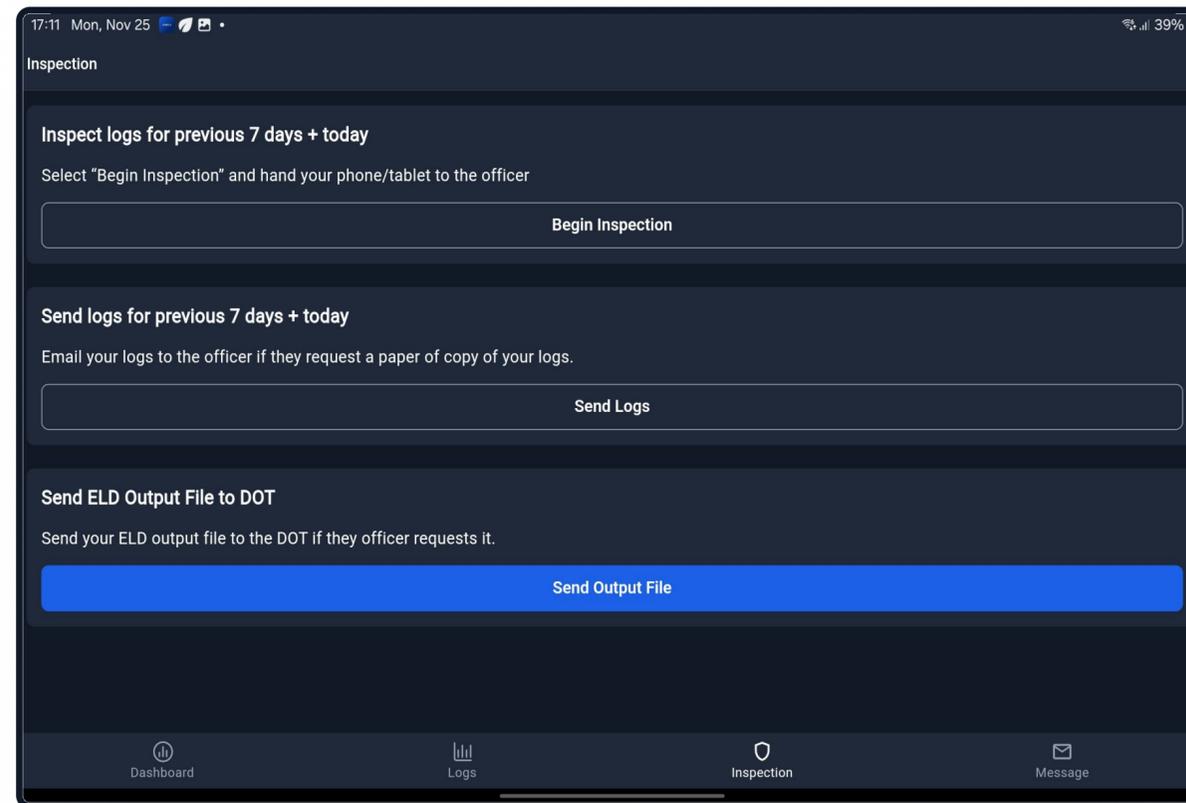

Transfer ELD records to authorized safety officer for inspection:

03 Tap “Inspection” icon on the bottom navigation bar

04 In the pop-up menu, select “Send ELD Output File to DOT” in order to send your electronic log book’s data to DOT.

