



USER MANUAL

ZIGZAG ELD

ZIGZAG ELD ensures FMCSA compliance and delivers superior safety and productivity for any fleet

 zigzageld.com





Table of Contents

3. Install the app
4. Connection
5. Recording drive time
6. Changing status
7. DOT inspection
8. LED's guide

Downloading the Driver App


Please ensure that a Vehicle Gateway is installed in your vehicle before proceeding. Refer to the Vehicle Gateway Manual for further instructions.

Download the ZIGZAG Driver App from the Google Play Store (for Android) or the App Store (for IOS).

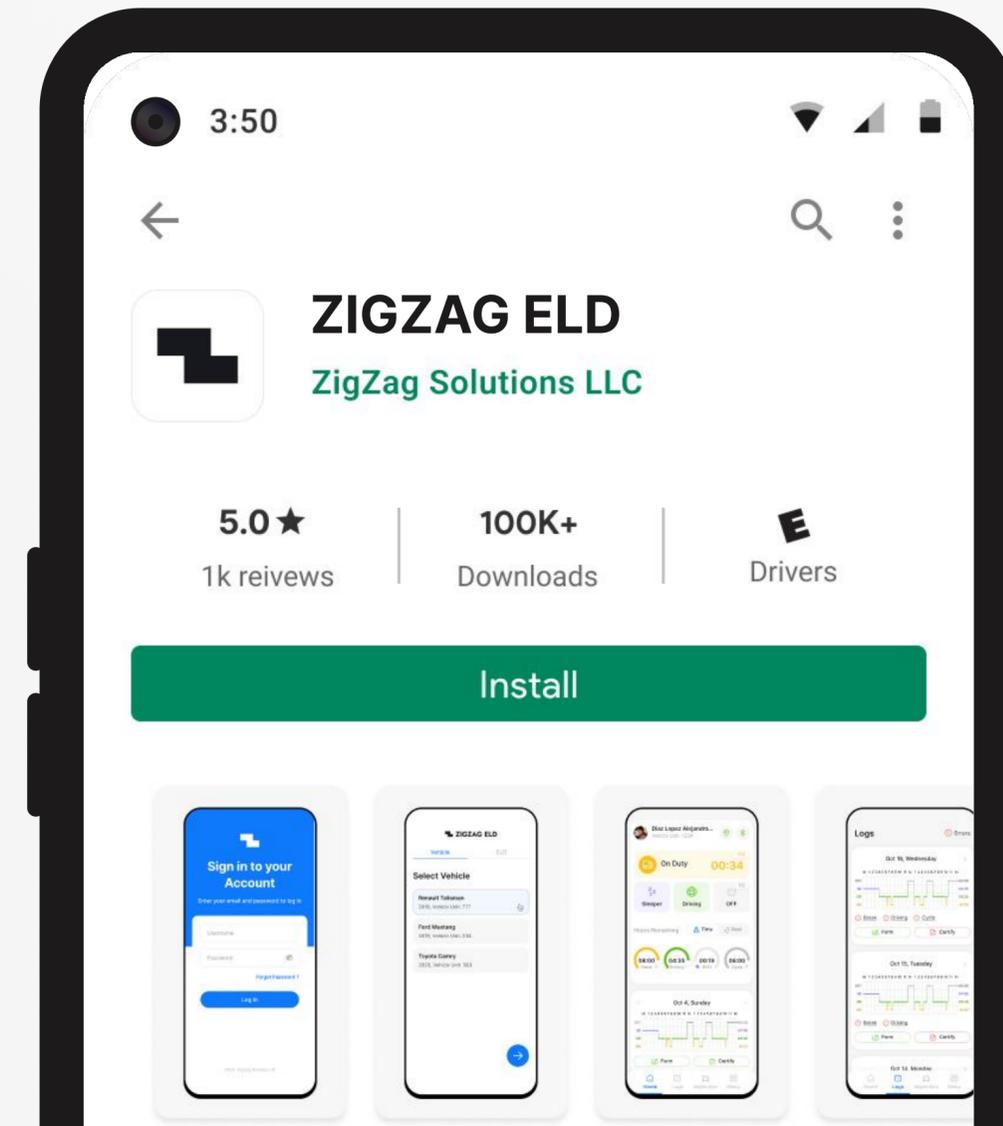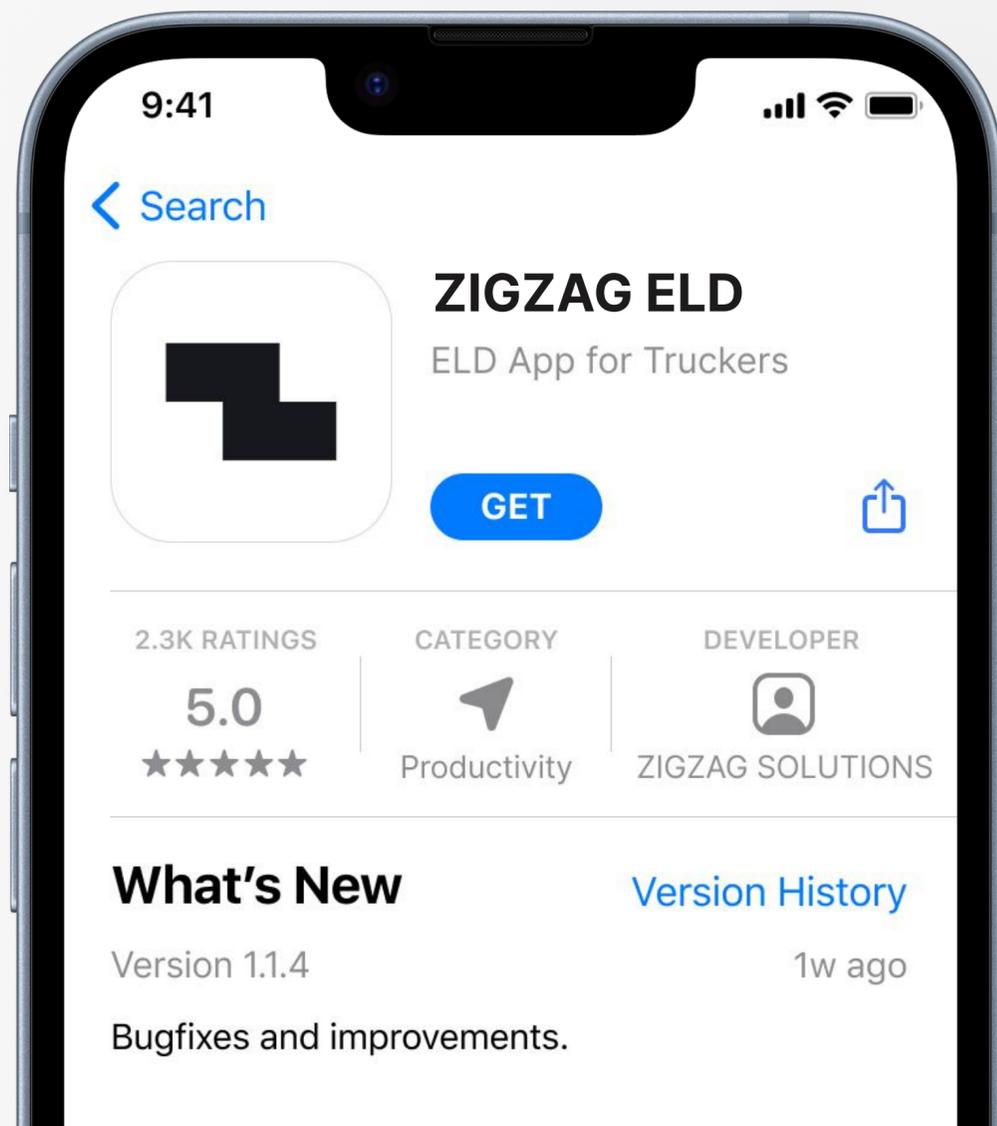


1. Log in

Open ZIGZAG app and enter your username and password

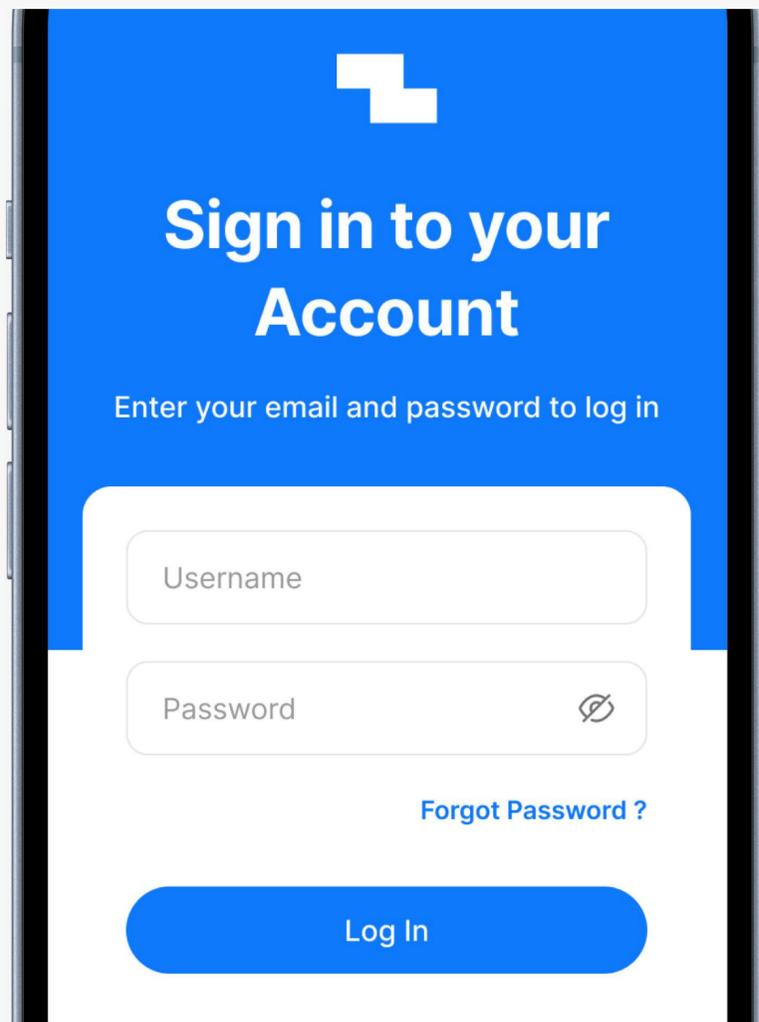


2. Select vehicle

Choose your track from the list of vehicles

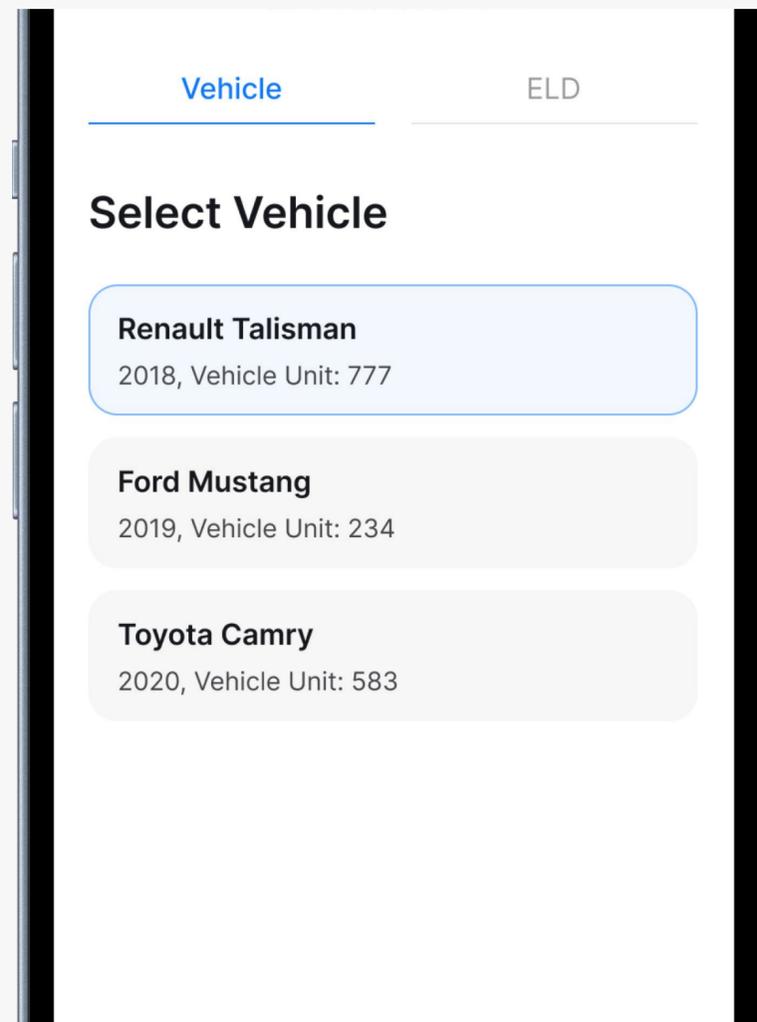

3. Connect to ELD

Press "Scan" button and connect to your pt-30 device


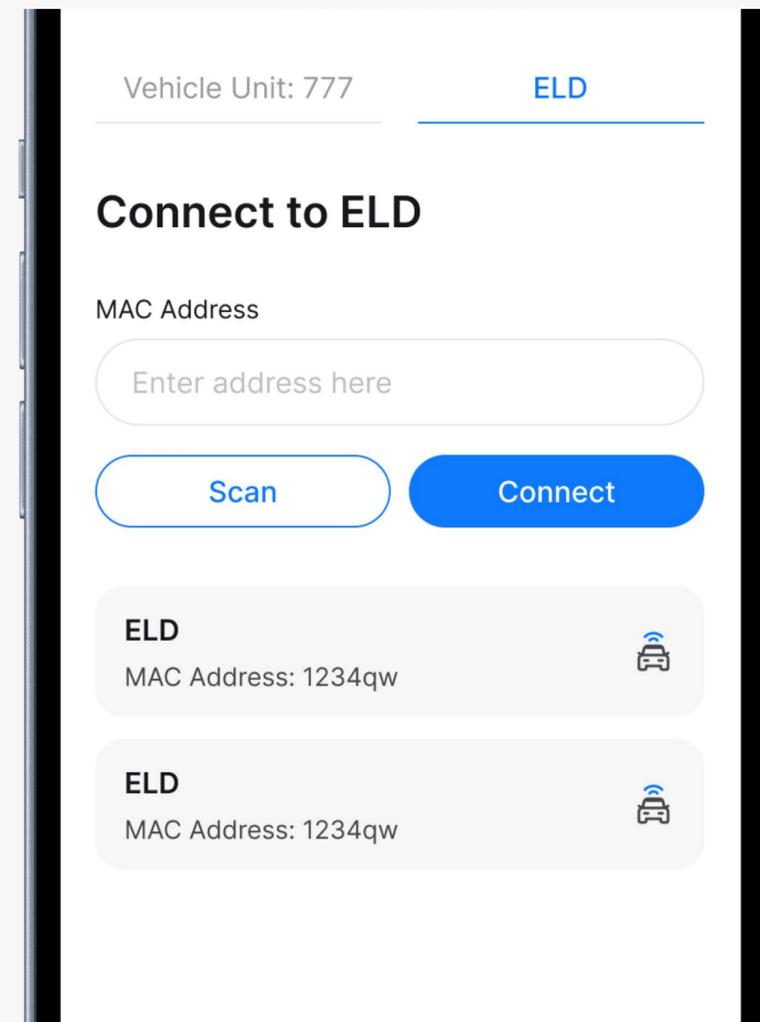


Recording drive time

The ELD considers a vehicle in motion when it exceeds 5 mph. When your vehicle is moving, your duty status automatically updates to DRIVING.

When your vehicle stops, after 15 seconds button "Change status" will become active, allowing you to manually change your duty status.

If the vehicle remains stationary for 1 minute, a message will appear with a 60-second timer, prompting you to choose whether to stay in DRIVING or switch to ON DUTY. If no action is taken by the end of the timer, the app will automatically switch your status to ON DUTY. If the vehicle starts moving again after this change, a new DRIVING status will be initiated.

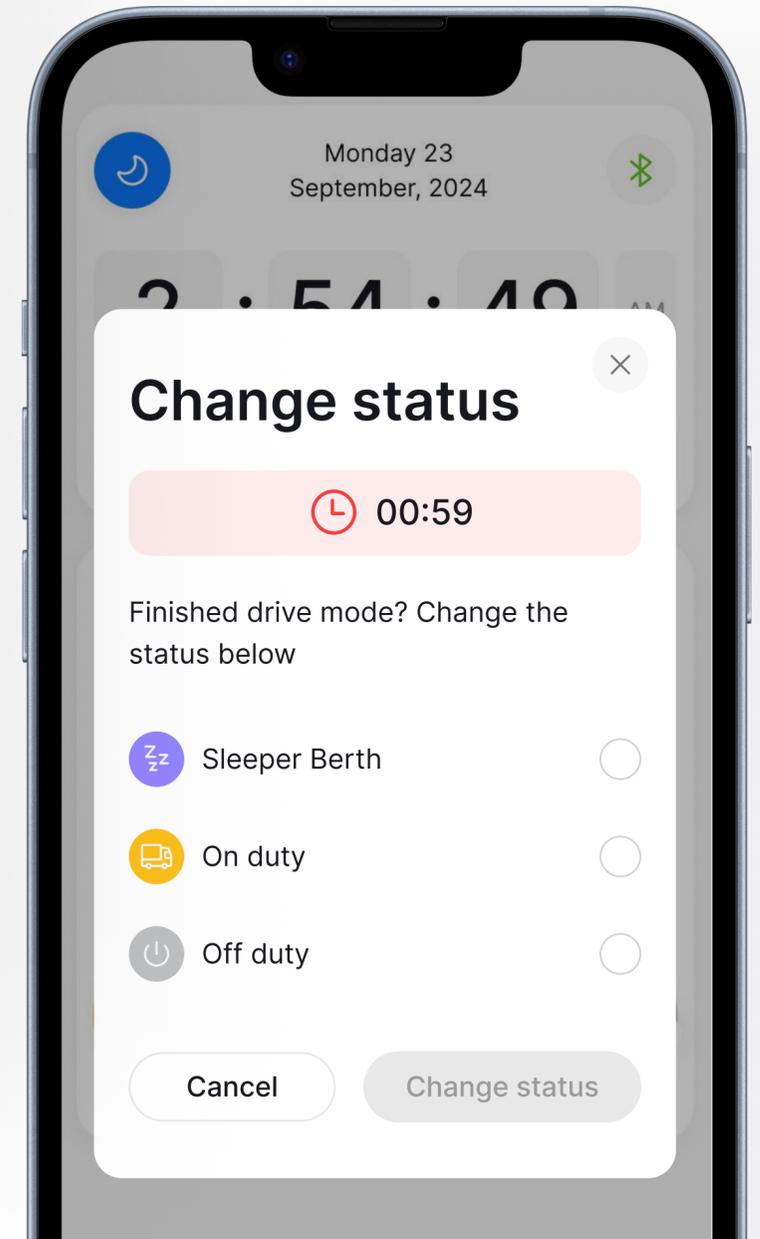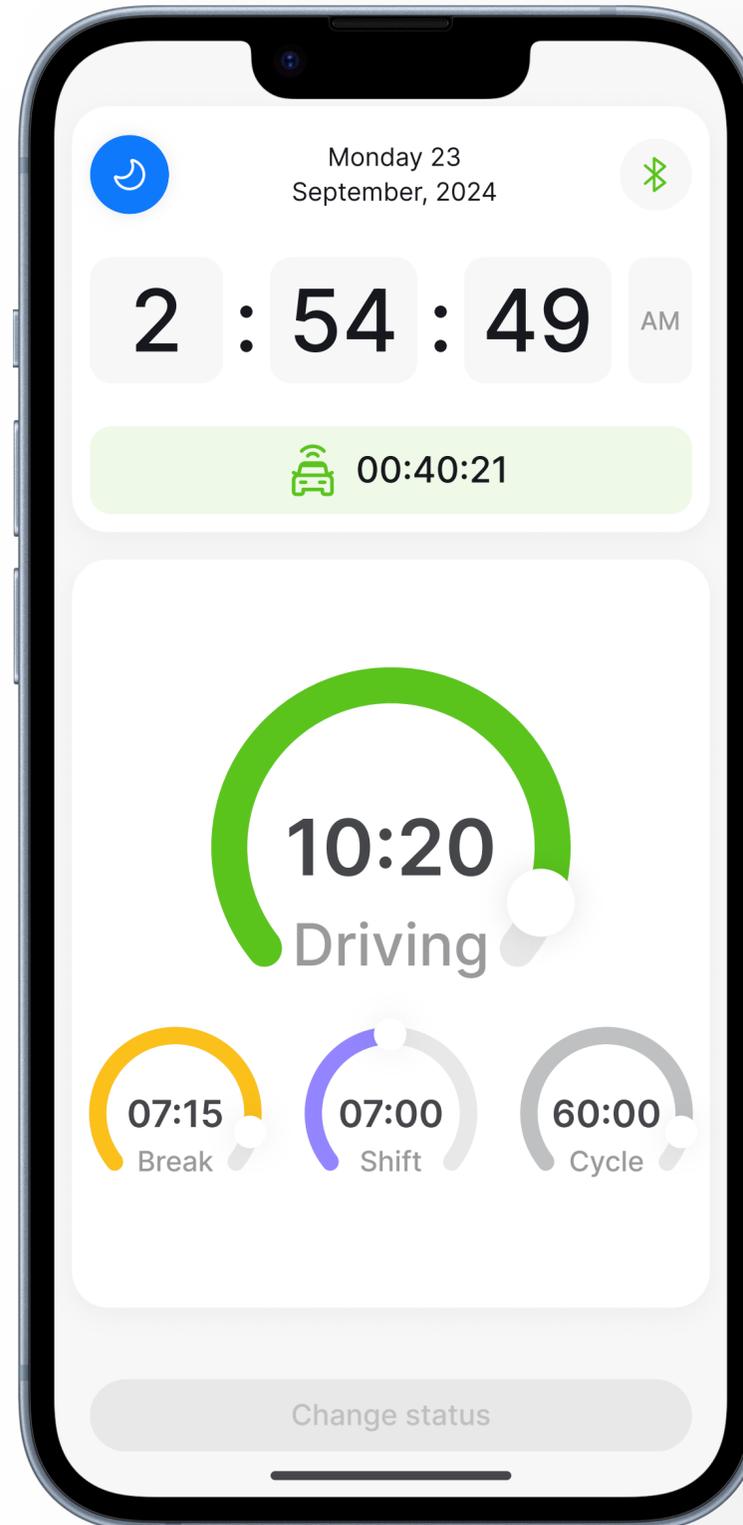

Changing status

You can change your duty status on homepage. Select a status from the four main statuses and it will become active. Active status will be on top of the others. When you choose tag YM or PC a message will appear with confirming changing the status.



Yard Moves

Press the tag **YM** to change On Duty status to Yard Moves.

Personal Conveyance


Press the tag **PC** to change Off Duty status to Personal Conveyance.



DOT Inspection


Open Inspection Page

Tap the Inspection menu item on the navigation at the bottom of the screen

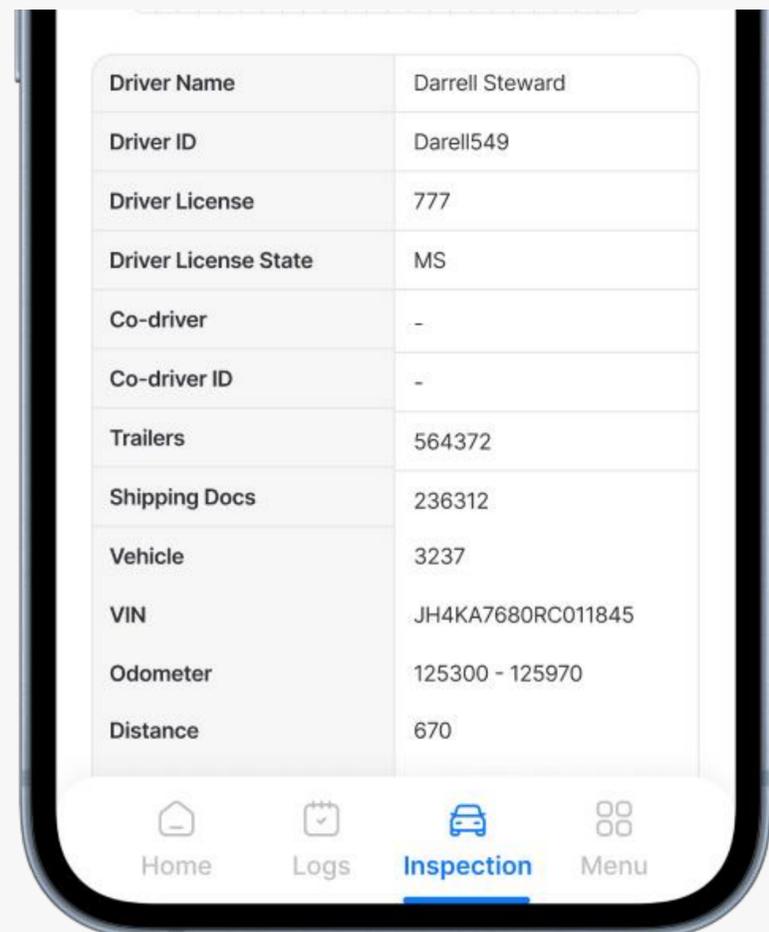


Inspection Preview

You can preview the inspection right on this page

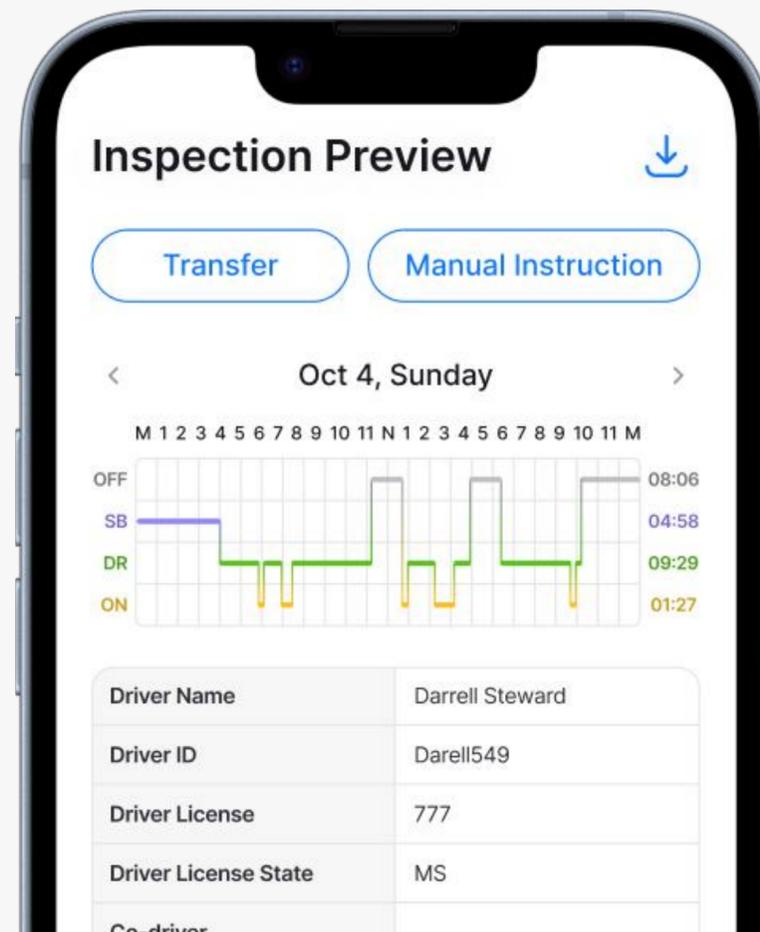

Transfer Logs

Press the button Transfer in order to transfer logs through Web or by E-mail

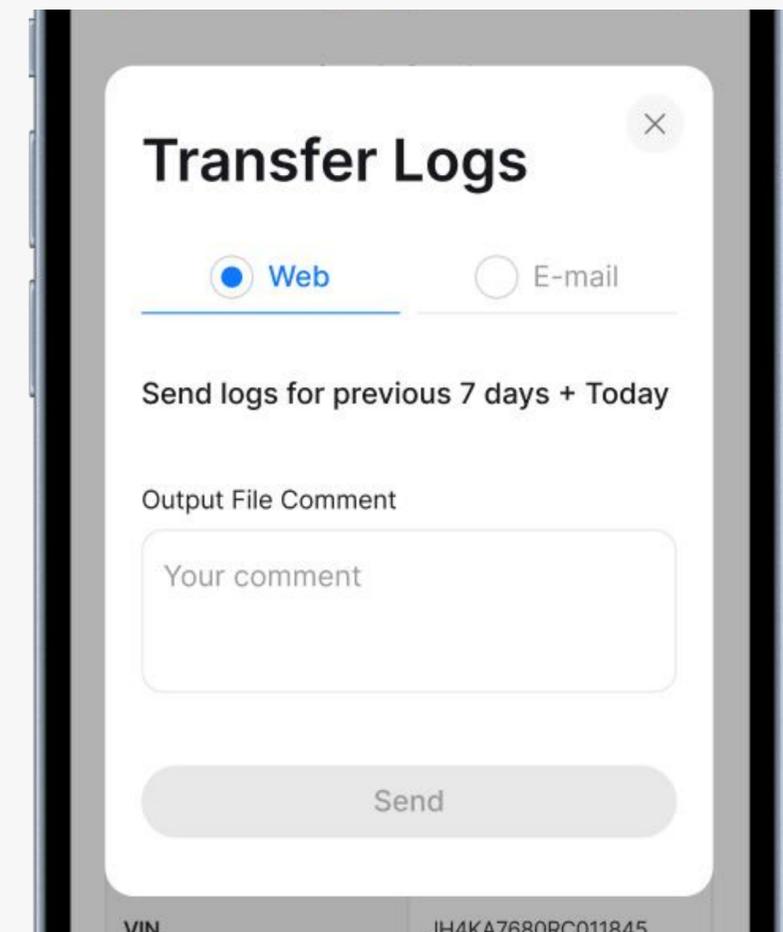


LEDs guide

The PT30 device is equipped with three main functional components:


- GPS receiver
- CAN transceiver
- Low-power Bluetooth transceiver

PT30 Device LED Indicators:

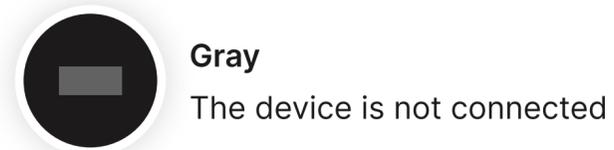


Gray

The device is not connected

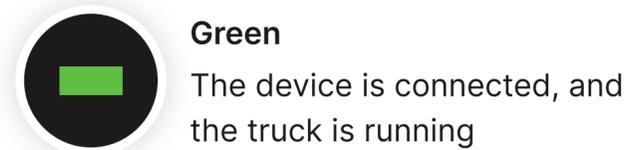


Green

The device is connected, and the truck is running

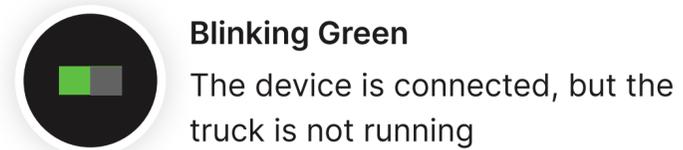

Blinking Green

The device is connected, but the truck is not running

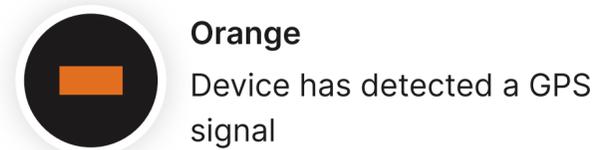


Orange

Device has detected a GPS signal



Flashing Red

The device is searching for a GPS signal

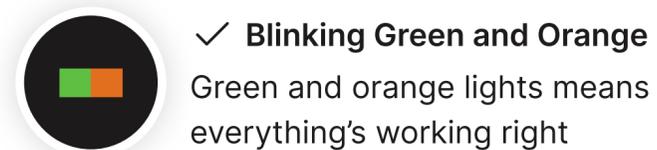

✓ **Blinking Green and Orange**

Green and orange lights means everything's working right

